

Let's build a Weather Station!

First of all lets look at what we are going to measure in our weather station:
Temperature and Pressure

TEMPERATURE:



Temperature is the measure of heat expressed in terms of several scales, including Fahrenheit and Celsius.

PRESSURE:



Atmospheric pressure, also known as barometric pressure, is the pressure within the atmosphere of Earth.

What is a weather station?

A weather station is a facility, either on land or sea, with instruments and equipment for measuring atmospheric conditions to provide information for weather forecasts and to study the weather and climate.

The measurements taken include temperature, atmospheric pressure, humidity, wind speed, wind direction, and precipitation amounts.

Wind measurements are taken with as few other obstructions as possible, while temperature and humidity measurements are kept free from direct solar radiation.



**University of
Sunderland**

Let's build a Weather Station!


What are we going to need to build our weather station?

KIT LIST

- 1 * DHT11 Sensor
- 1 * Pi Pico
- 1 * Button switch
- 1 * oled 1306 Display
- 1 * Breadboard
- 11 * Jumper wires



Kit

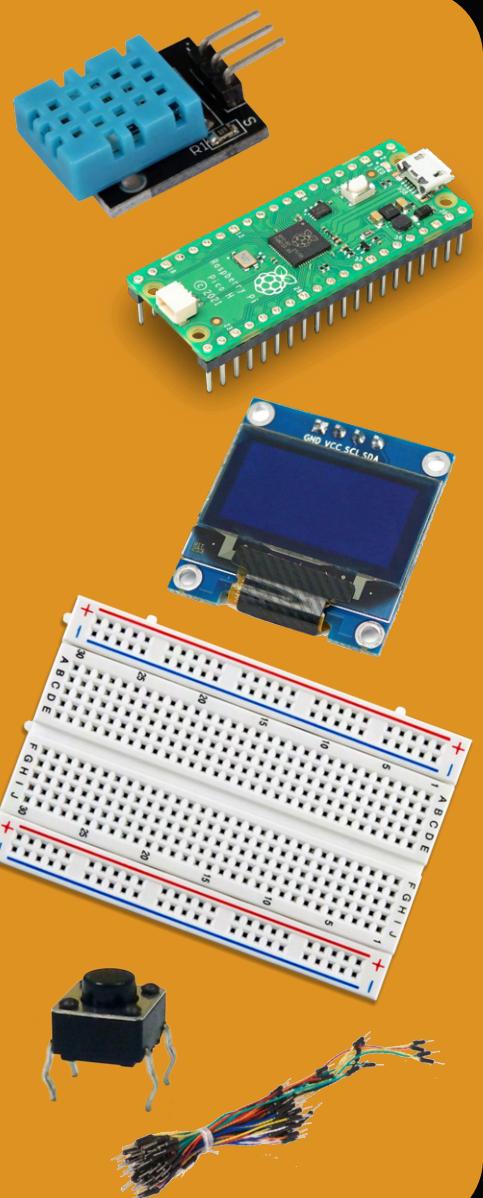

**University of
Sunderland**

Let's build a Weather Station!


From design to build what will our weather station end up looking like?

KIT LIST


- 1 * DHT11 Sensor
- 1 * Pi Pico
- 1 * Button switch
- 1 * oled 1306 Display
- 1 * Breadboard
- 11 * Jumper wires



Design

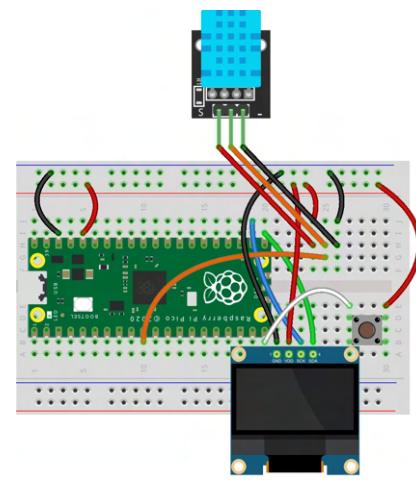


Build

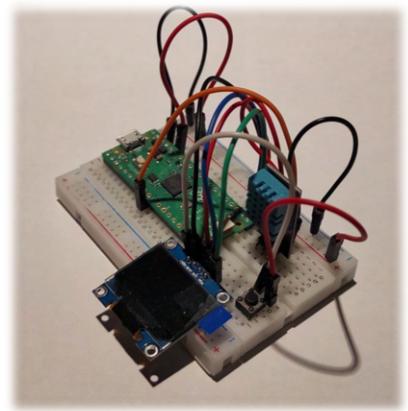


**University of
Sunderland**

Let's build a Weather Station!

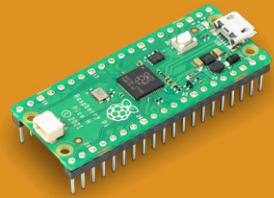


Where using a
Raspberry Pi Pico
as our microprocessor.
So what exactly is it?

Raspberry Pi Pico is Raspberry Pi's first microcontroller board, designed especially for physical computing. Microcontrollers are a different type of device than Single Board Computers (like the Raspberry Pi 4 and previous generations of Pi). They don't run an operating system and they are typically programmed to do just one task – though that task can be pretty intricate and exciting! They're perfect for experimenting with hardware and using as the brains of custom devices, machines and inventions.

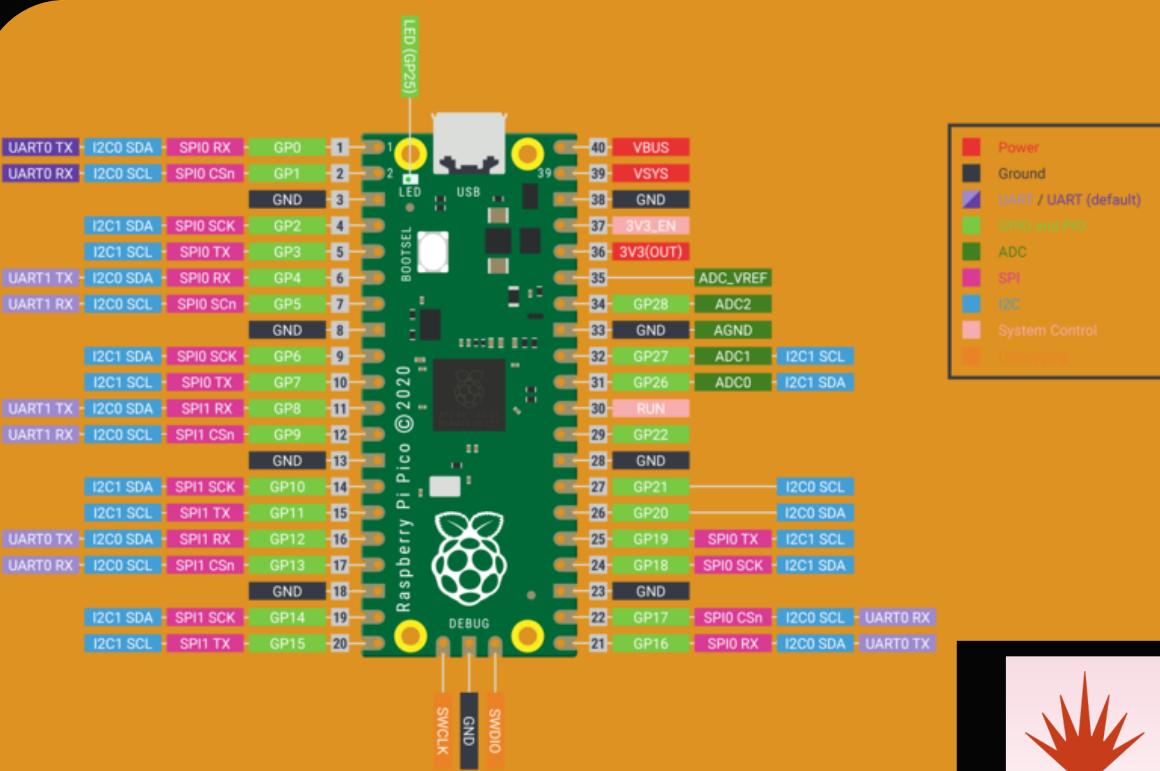

**University of
Sunderland**


Let's build a Weather Station!

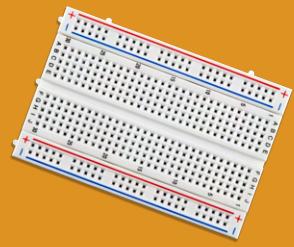

We're building our weather station as a prototype using a breadboard.
So what exactly is a breadboard?

A breadboard is used as a platform to prototype your circuits on. They provide a reusable environment that allows different ideas to be tested.

Breadboards come in different sizes, but they all have a pattern of holes for jumper wires. The main area has holes connected vertically and the edges (power rails) have the holes connected horizontally.

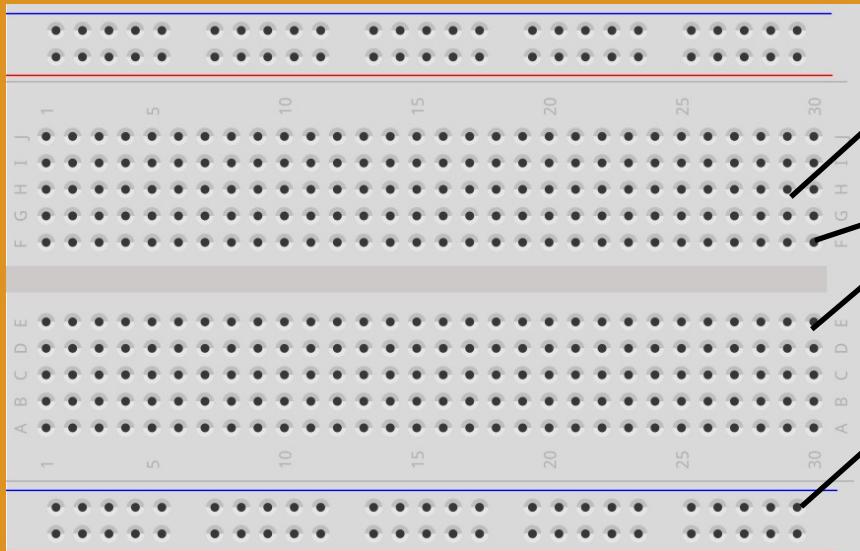

Vertically connected holes to allow patching to other vertical areas..


There two areas are separate to allow more devices to be included.

Horizontally connected rows to distribute power to devices. RED for positive (+).
BLUE for negative (-).



**University of
Sunderland**


Let's build a Weather Station!

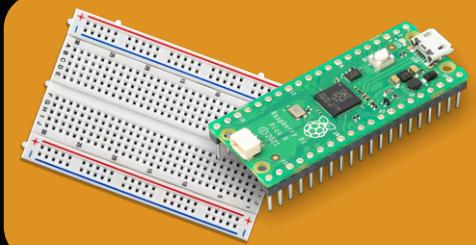

It's time to put the microprocessor onto the breadboard which is where we are going to build our weather station. So how do we line them up and fix them together?


The breadboard has 30 columns in two blocks in the centre. The Pico has to be located at the very left hand side with the microprocessor pins in the middle of the two blocks with the pins lined up to the very left hand edge, as shown in the diagram below.

Be very careful pressing the Pico down, don't force it or it may break. Press gently at the edges so it sits flush to the breadboard with the Pico pins all the way in so you cannot see them.

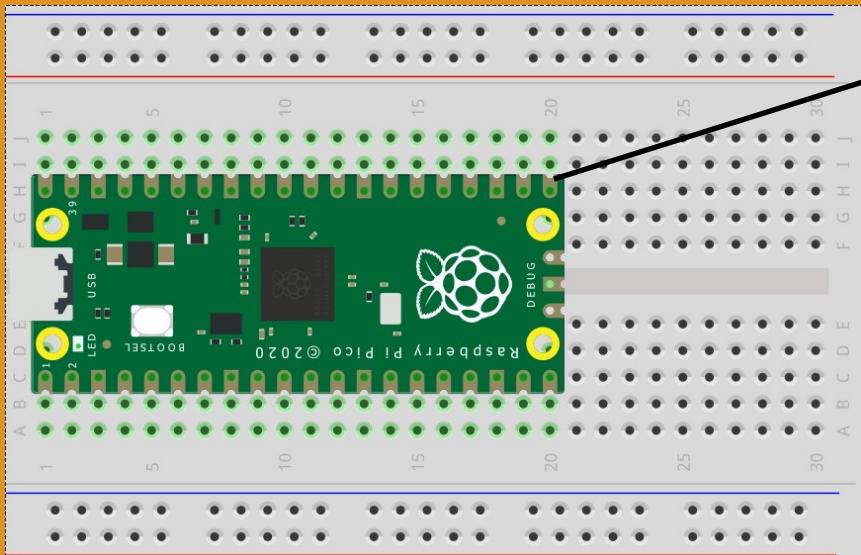

**University of
Sunderland**

Let's build a Weather Station!

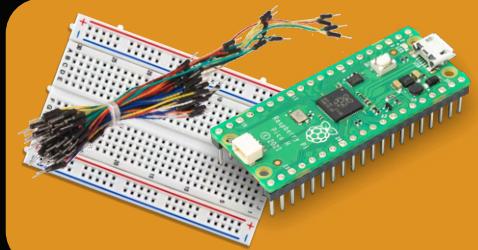



That's the Pico on the breadboard and we can start adding all the components and wires.

Let's start by adding power to the power rails (rows) at the top of the board.

The top row of the breadboard needs to have a 3.3v (+) and ground (GND) added to them.


We can do this by adding a wire from the 3.3v power out on Pico to the RED rail with a RED wire and a GND to the BLUE rail using a BLACK wire. See the diagram on page 4 for the Pins.

Pin 38 - BLUE rail, Pin 36—RED Rail

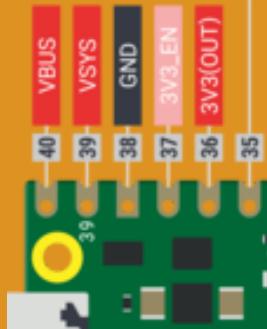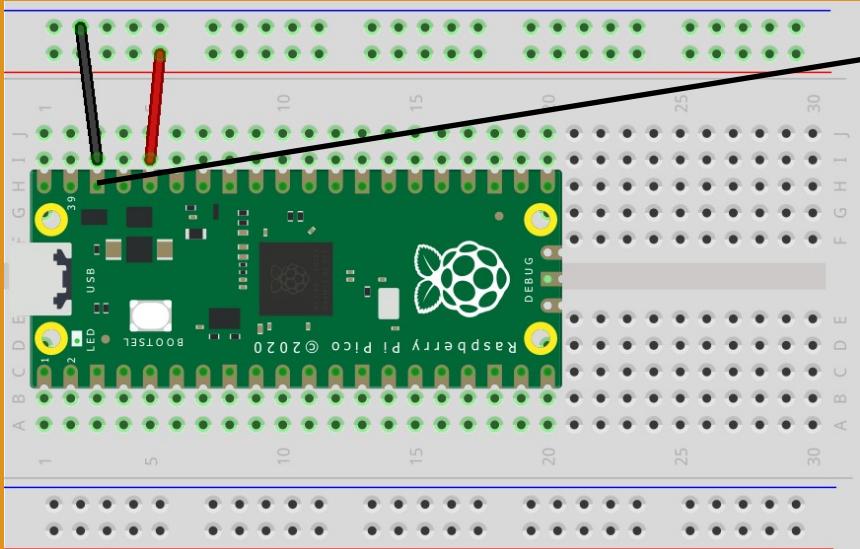

**University of
Sunderland**

Let's build a Weather Station!

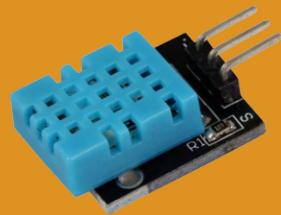

Now we have the basic prototype setup, we have the Pi Pico on the breadboard and the power distribution is ready. Now we can site the rest of the components.


The first component we can add is the DHT11 sensor.

It has 3 connectors that need to be lined up on the breadboard

The three connectors are 3.3v power, GND


and a signal pin (in the middle) which send the readings to the Pico.

Locate the 3.3v pin (+) on the third row up from the middle of the board and 3 holes way from the Pico

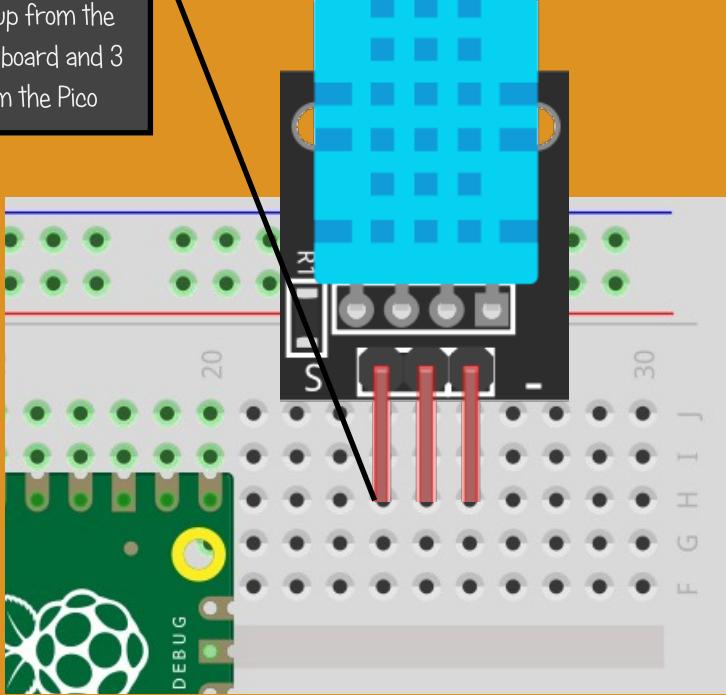

**University of
Sunderland**


Let's build a Weather Station!

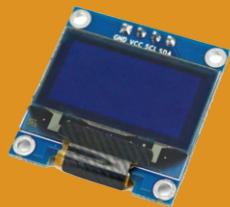

Now we have the basic prototype setup, we have the Pi Pico on the breadboard and the power distribution is ready. Now we can site the rest of the components.

The next component we can add is the OLED screen. It has 4 connectors that need to be lined up on the breadboard. The four connectors are 3.3v power (VCC), GND, and the clock (SCL/SCK) and data signal (SDA) pins which send the readings to the Pico.

Locate the end pin on the bottom row 1 hole way from the Pico

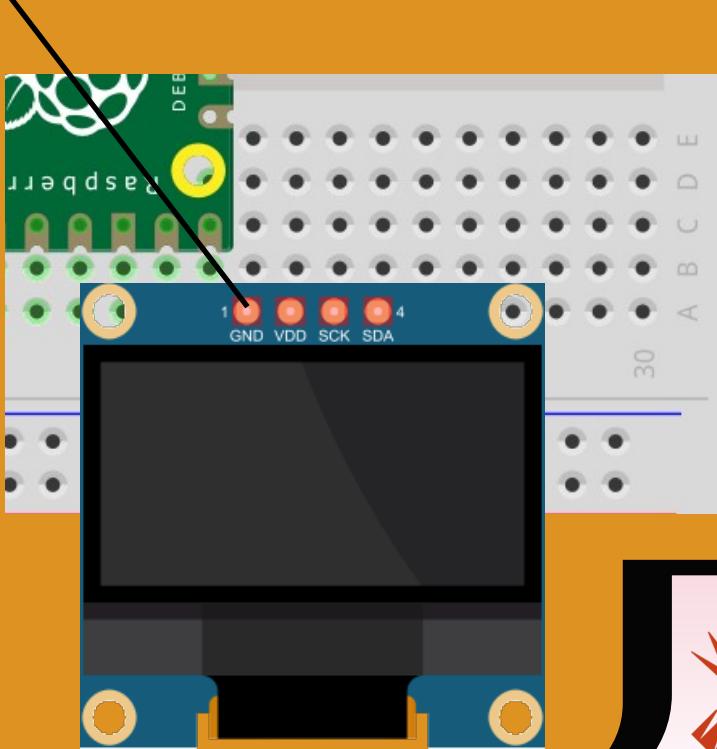

BEWARE!

Check the connections carefully some OLED have a different layout!



**University of
Sunderland**

Let's build a Weather Station!




Now we have the basic prototype setup, we have the Pi Pico on the breadboard and the power distribution is ready. Now we can site the rest of the components.

The next component we can add is the Button. It has 2 connectors that need to be lined up on the breadboard

The 2 connectors work in either direction so as long as the button is in the right location it will work

The button should be in the bottom area in the middle or the left hand side with the pins in the last, and fourth from last row.

There isn't a VCC pin (+) or a GND (-) pin on a basic button.

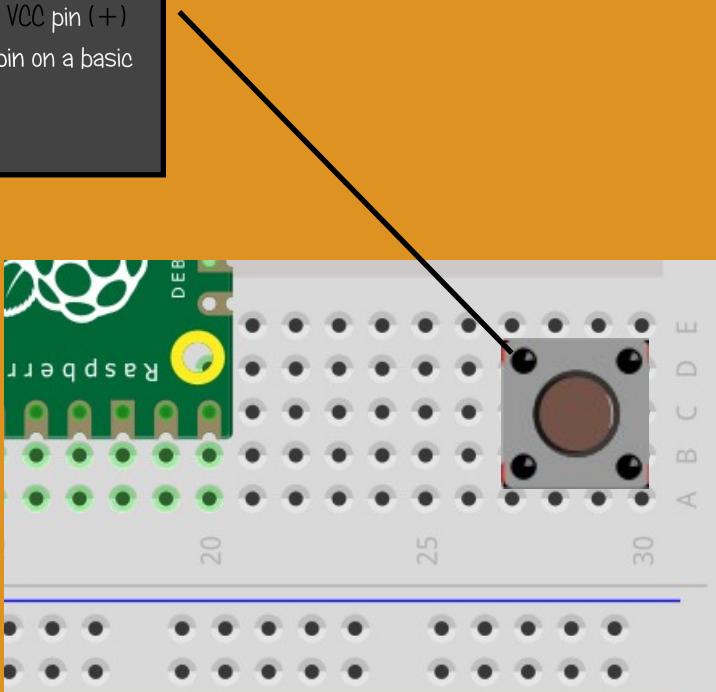

NOTE!

The connections work in either direction. If the button has 2 pins they need to be on the left and right side. If it has 4 pins they need to be on the left and right side too.




University of Sunderland

Let's build a Weather Station!



Now we have all the components on the board we can start to wire them together!

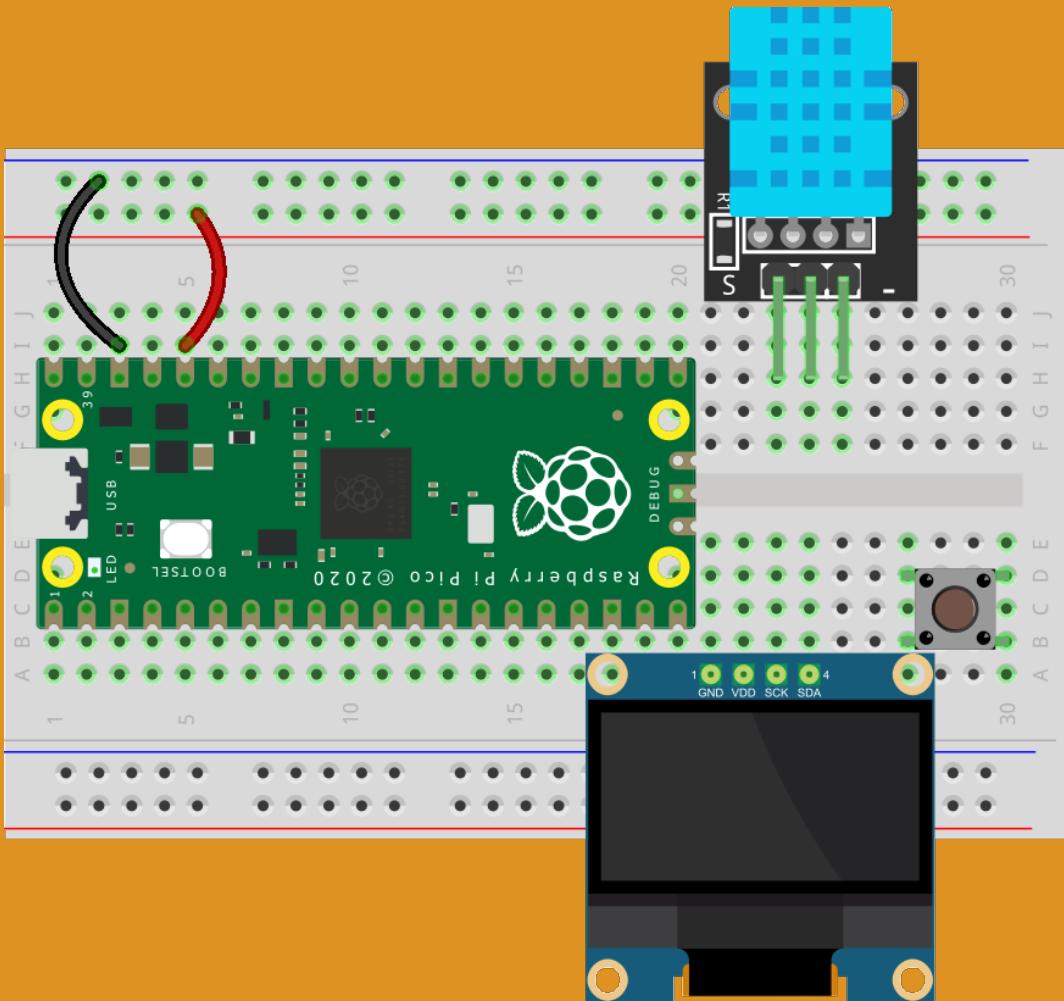


**University of
Sunderland**

Let's build a Weather Station!




Now we have all the components on the board we can start to wire them together!

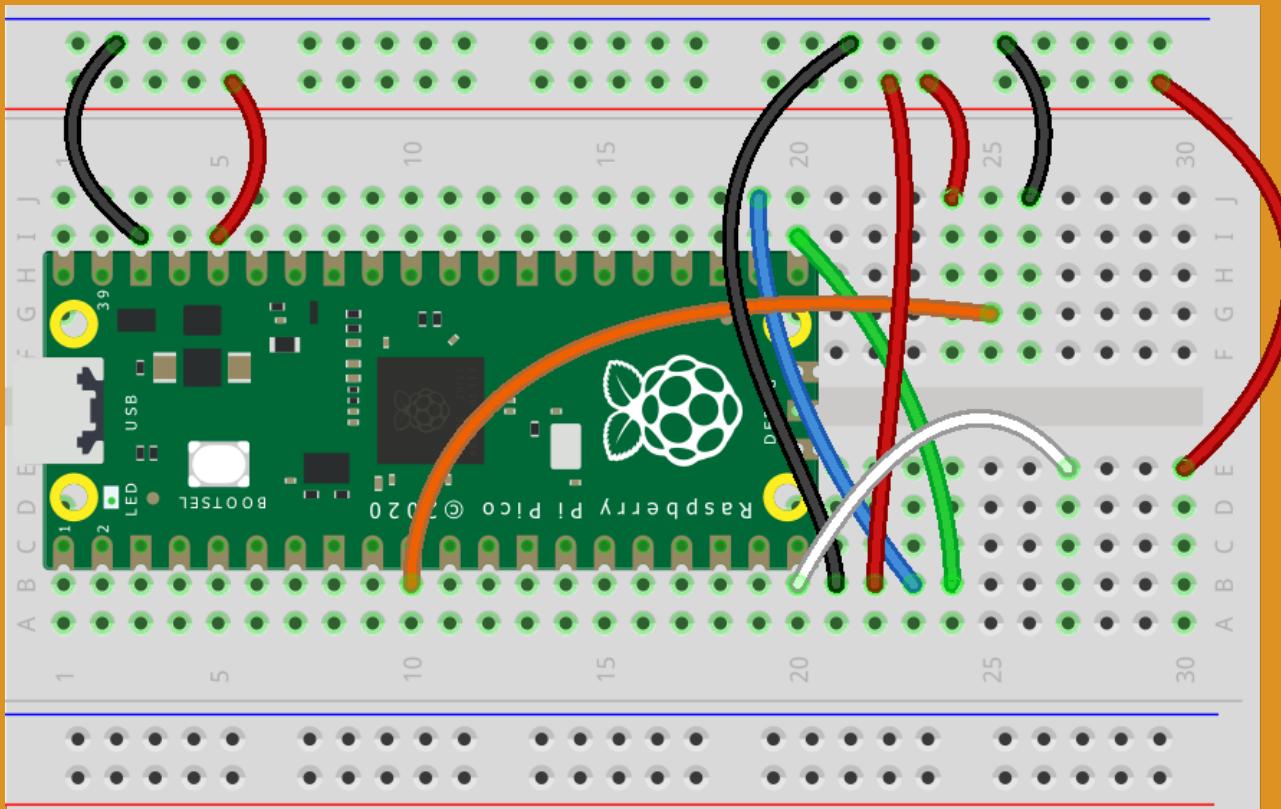

Let's build a Weather Station!



Now we have the all the components on the board and the wiring so what next?

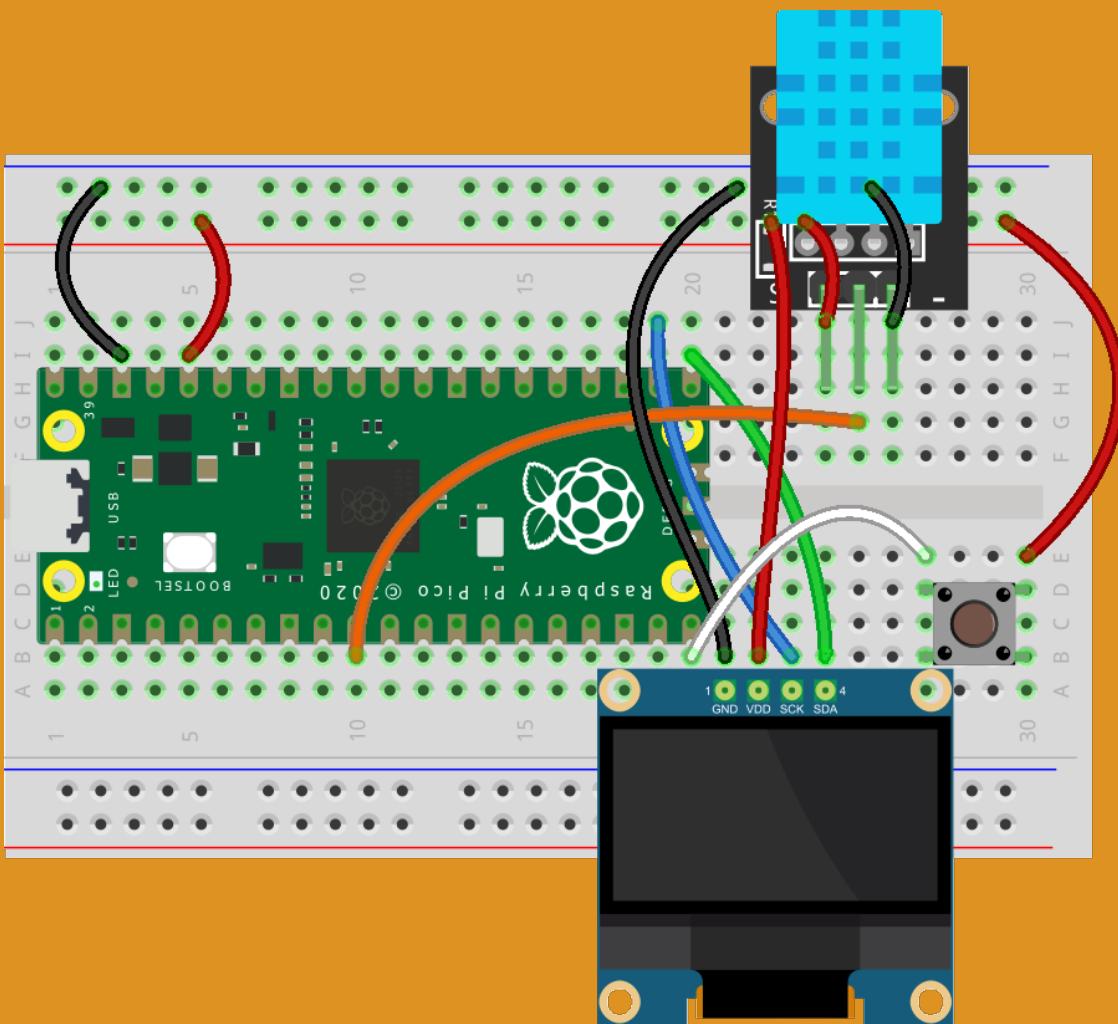


**University of
Sunderland**

Let's build a Weather Station!



Let's plug it in and see what we get!

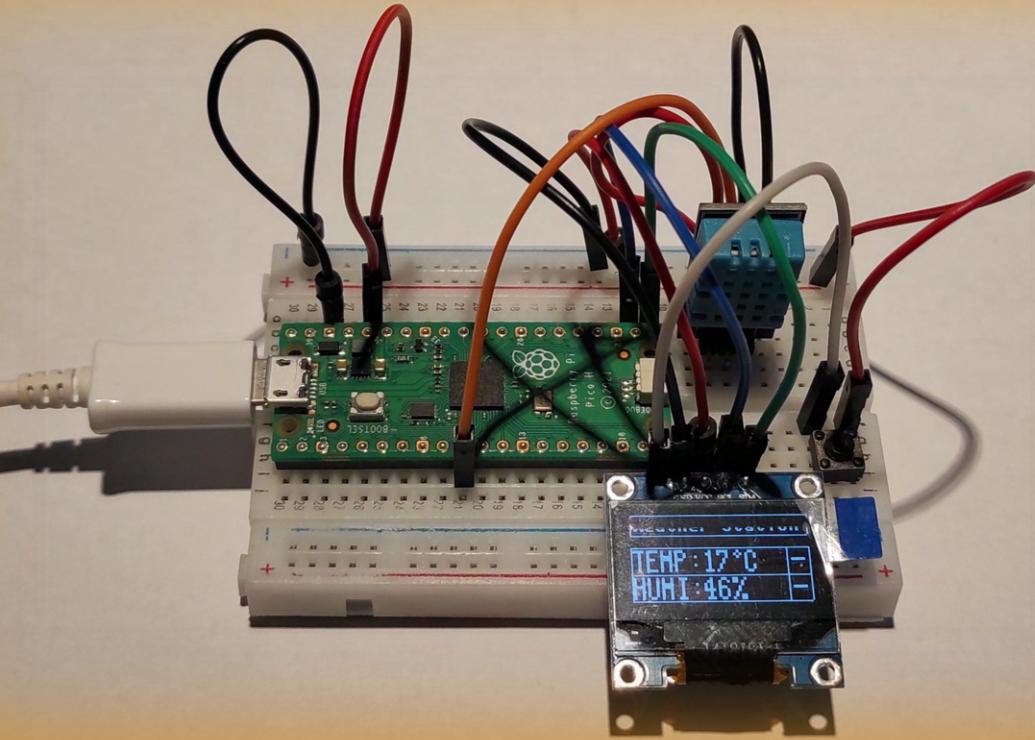

Now you've got your weather station up and running try placing it in different locations and see what happens! You can power it from a simple USB power pack if you have one!



**University of
Sunderland**